

technicolor



AT6400 AllTouch IR Universal Remote Control

User Guide

Welcome to the Ultimate Control Experience

Your new AT6400 AllTouch® Infrared (IR) Universal Remote Control (remote) is a true universal remote, functioning as four remotes in one. As one example, you can use this remote to operate your set-top, your TV, and two other devices, such as a DVD player and VCR.

Important Information About Your Remote

Your remote is initially programmed to only operate your set-top. Therefore, you must program the remote to operate your TV, VCR, or other devices. See **Program the Remote to Control My Devices** to learn how to enter device codes and program your remote.

Note: You must use the IR remote within line of sight of the set-top to operate the set-top correctly.

How Does A Universal Remote Control Work?

You tell the remote which type of device you want to operate using the four keys arched across the top of the remote. These keys, known as **mode keys**, are labeled **STB**, **TV**, **DVD**, and **AUX**. Each mode key is associated with a specific device. As an example, after programming the remote, if you want the remote to operate your TV, you simply press the TV key. Other keys you press on the remote, thereafter, should operate your TV. Want to switch the remote to operate a different device? Just press the mode key for the next device you want to operate. In this guide, you will learn which types of devices you can control and how to program the remote to control your specific devices.

6630 000 00681

Where Do I Start?

Before you begin using your remote, complete the following initial setup tasks.

Install the Batteries

The remote requires two AA batteries (alkaline recommended). A diagram in the battery compartment of the remote indicates proper placement of the batteries. When batteries are properly installed, the light on the remote blinks each time a key is pressed.

Visit the Quick Reference Section

Use the Quick Reference section of this guide to familiarize yourself with the remote and the functions of its various keys. Knowing the function and location of the keys on the remote will assist you when you are programming the remote.

Program the Remote

To learn how to program your remote, refer to the sections **What Devices Can I Control**, **What Devices Do I Want to Control**, and **Program the Remote to Control My Devices** for further instructions.

Find a Place to Store Your Remote

Keeping up with one remote is much easier than keeping up with four or five remotes. However, it is still a good idea to find a storage location for your remote. The AT6400 is not a toy. It should be kept out of the reach of children under the age of 6 years.

Program the Remote to Control My Devices

Your remote is initially programmed to only operate your set-top. You will need to set up the remote to operate your other devices using its TV, DVD, and AUX modes. The TV key may be programmed to operate a standard or high-definition television (HDTV). The DVD key may be programmed to operate a DVD player. The AUX key may be programmed to operate a VCR, a receiver, an amplifier, or a Home Theater in a Box (HTIB) system. If the remote provides only limited functionality for a device, you can look for a code that provides more functionality.

Refer to the code tables at the end of this guide to locate additional programming codes.

Note: You have the option to assign some remote keys to operate one device type only. For example, you may want to assign volume control to the TV only. If this is the case, you can reprogram power, volume, and channel control using procedures found later in this guide.

Assigning a Device Code to a Mode Key

1. Refer to the code tables at the end of this guide to locate the information for the device you want to program.

Note: If your device is not listed, you may be able to program the remote using the Auto-Search function. Go to **What If None of the Codes Work** for instructions.

2. Turn on the device that you want to assign to a mode key.

3. Press and hold the appropriate mode key (**TV**, **DVD**, or **AUX**) on the remote, and then press and hold the **OK** key.

4. Release *both* keys and the mode keys blink twice.

5. Enter the first 4-digit setup code for the device using the numeric keys (0-9) on the remote. The mode key blinks three times to indicate that the code entry was accepted.

Notes:

- When an invalid code is entered, the selected mode key displays a long flash to indicate that you have not entered the code correctly.

- Should the remote time-out before you complete the code setup, you must start over. This is indicated by one long flash of the red LED.

6. Point the remote at the device, and press **POWER** to test the device.

7. Did the device power off?

- If **yes**, write this code number in the table found in this guide. You may need it again if the device code is accidentally erased.

- If **no**, repeat this procedure from step 3 using a different setup code.

Note: If none of the codes listed for your brand of device operate the device correctly, go to **What If None of the Codes Work** for instructions.

8. Repeat this procedure for each mode key you want to program.

What If None of the Codes Work?

If none of the codes listed for your brand of device operate the device correctly, or if your device is not listed in the codes table, you can use the Auto-Search function to search through the code library for a valid code. This section provides procedures for using the Auto-Search function to search the code library for TV, DVD and AUX mode codes.

Note: Read the procedures in this section thoroughly before beginning. You need to be prepared to observe the behavior of the remote.

Auto-Search Features

Consider the following items when using Auto-Search:

- The Auto-Search function begins searching from the first code.

- If a valid code is not found, the green backlight blinks twice and the remote returns to normal operation.

- If any other key is pressed except **PLAY**, **ENTER**, **POWER**, **EXIT**, **REW**, **FF**, or numeric keys 1 through 4 (when programming the AUX mode key), the mode key displays a long red flash (error message) and the remote returns to normal operation.

- Should the remote time-out before you complete the Auto-Search function you must start over. This is indicated by one long flash of the red LED.

- If the device is not listed and the Auto-Search function is unable to find a usable code, you may need to use the original remote provided with the device.

Auto-Searching the Code Library for TV or DVD Mode Codes (Program Code 922)

Note: This procedure only applies to TVs and DVDs.

1. Turn on the device you that you want to assign to the TV or DVD key.

2. Point the remote at the device.

3. Press and *while holding* a selected mode key (**TV** or **DVD**), press the **OK** key. For example, to search for a TV code, press and hold **TV** and **OK** at the same time.

4. Release *both* keys and all the mode keys blink twice.

5. Enter the programming code **9 2 2** by pressing the numeric keys on the remote. The mode key you selected in step 3 blinks twice to indicate a successful entry.

6. Point the remote toward the device, and press **PLAY**.

7. Your device powers off when it finds the correct code. Then, choose one of the following options:

- Save code and exit** – Press the **ENTER** key on the remote to program the code in the remote and the mode key flashes three times indicating successful entry.

- Step forward** – Press the fast-forward (**FF**) key on the remote to step ahead through the codes one at a time. Then, return to step 6.

- Step backward** – Press the rewind (**REW**) key on the remote to step back through the codes one at a time. Then, return to step 6.

- Exit without saving the code** – Press the **EXIT** key on the remote. The selected mode key flashes three times and returns to normal operation.

- Send the current code** – Press the **POWER** key on the remote to send the current code. If the device turns back on, press the **ENTER** key. If the device does not turn on, return to step 6.

- Continue with auto-search function** – Press the **PLAY** key on the remote to continue with the auto-search function. Then, return to step 6.

Auto-Searching the Code Library for AUX Mode Codes (Program Code 922)

1. Turn on the device that you want to assign to the AUX key.

2. Point the remote at the device.

3. Press and *while holding* the **AUX** key, press the **OK** key.

4. Release *both* the **AUX** key and the **OK** key and all the mode keys blink twice.

5. Enter the programming code **9 2 2** by pressing the numeric keys on the remote. The AUX key blinks twice indicating a successful entry.

6. Press the **PLAY** key, choose one of the following device categories and then, using the number keys on the remote, press its assigned number (1 – 4) based on the following list:

1 = VCRs 2 = Receiver/Tuners
3 = Amplifiers 4 = HTIB

Note: The device categories are number-coded to provide a more direct programming method.

7. Point the remote toward the device, and press **PLAY**.

8. Your device powers off when it finds the correct code. Then, choose one of the following options:

- Save code and exit** – Press the **ENTER** key on the remote to program the code in the remote and the mode key flashes three times indicating successful entry.

- Step forward** – Press the fast-forward (**FF**) key on the remote to step ahead through the codes one at a time. Then, return to step 7.

- Step backward** – Press the rewind (**REW**) key on the remote to step back through the codes one at a time. Then, return to step 7.

- Exit without saving the code** – Press the **EXIT** key on the remote. The selected mode key flashes three times and returns to normal operation.

- Send the current code** – Press the **POWER** key on the remote to send the current code. If the device turns back on, press the **ENTER** key. If the device does not turn on, return to step 7.

- Continue with auto-search function** – Press the **PLAY** key on the remote to continue with the auto-search function. Then, return to step 7.

Reassign Mode Keys

You can reassign a mode key to operate a different device. For example, you can reassign the AUX key to operate a DVD player or a TV. If you reassign a key, be sure you update the table found in this guide.

Reassigning Mode Keys (Program Code 944)

1. Press and hold the **STB** mode key on the remote.

2. Without releasing the **STB** key, press and hold the **OK** key.

3. Release *both* the keys and all mode keys flash twice.

4. Enter the programming code **9 4 4** by pressing the numeric keys on the remote. The STB mode key blinks twice indicating a successful entry.

5. Press and release the mode key associated with the type of device you want to control, and then press and release the mode key that you want to change. The newly assigned mode key blinks one time indicating a successful entry.

Some common examples:

- To program the AUX key to operate your DVD player, press **DVD** and then **AUX**.
- To program the DVD key to operate your TV, press **TV** and then **DVD**.

Change Volume Control

By default, once the TV mode key is programmed with a valid code, the volume and mute buttons control your TV. These keys adjust the volume of your TV (higher, lower, or temporarily switch the volume off (Mute), regardless of whether the remote is in STB, TV, DVD, or AUX mode.

If you prefer, you can choose to have the volume and mute buttons always control a different device rather than your TV, such as a home theater receiver. (See **Controlling Volume for One Device** below.) Note that you must first program one of the mode keys, such as AUX, with a valid code for that device.

Alternatively, you can choose to have the volume and mute buttons control different devices when the remote is in different modes. For example, you might want to control the volume on your TV when in TV mode, but the volume on your home theater receiver when in AUX mode. (See **Controlling Volume for Different Devices** below.) Note that not all devices have volume controls, so if you choose this option, the volume and mute buttons may do nothing in some modes, such as STB and DVD.

Controlling Volume for One Device (Program Code 955)

1. Press and hold the **STB** mode key on the remote.

2. Without releasing the **STB** key, press and hold the **OK** key.

3. Release *both* keys and all mode keys blink twice.

4. Enter the programming code **9 5 5** by pressing the number keys on the remote. The STB mode key blinks twice indicating a successful entry.

5. Press and release the mode key for the device you want the volume keys to control. For example, if you want to control volume through your TV, press and release **TV**. The selected mode key blinks three times to indicate a successful entry.

The volume keys now control only one device whether you are in STB, TV, DVD, or AUX mode.

Controlling Volume for Different Devices (Program Code 955)

1. Complete steps 1 through 4 of the **Controlling Volume for One Device** procedure.

2. Press and release the **Enter** key. The STB mode key blinks three times to indicate a successful entry.

After you press the **Enter** key, the volume keys control the device assigned to that mode. For example, in TV mode, the volume keys control volume for the TV only.

Notes:

- If any other key is pressed except the Mode keys and the **ENTER** key, the remote does not accept any changes or updates. The STB mode key displays a long red flash and the remote returns to normal operation.
- If the remote times out before you complete programming volume control, the remote does not accept any changes. You must start over from step 1 of this procedure.

Change Channel Control

The remote is set by default to control channel selection on the set-top. You can also program channel control to control any of the TV, DVD, or AUX mode devices provided the device allows for channel control assignment. Or, you can set the channel selection control programming to control channels (or page up or down) for all of the devices programmed in the four mode keys. Otherwise, you can only control channels (or page up or down) on a specific device, for example, the TV or DVD.

Note: The channel control keys include **CH/Page**, **Jump**, and the numeric keys 0 through 9.

Controlling Channels for One Device (Program Code 966)

1. Press and hold the **STB** mode key on the remote.

2. Without releasing the **STB** key, press and hold the **OK** key.

3. Release *both* keys and all mode keys blink twice.

4. Enter the programming code **9 6 6** by pressing the numeric keys on the remote. The STB mode key blinks twice to indicate a successful entry.

5. Press and release the mode key for the device you want the channel key to control. For example, if you want to control channels on your TV, press and release **TV**. The selected mode key blinks three times to indicate a successful entry.

The channel key now always controls the device associated with the mode you selected in this procedure, whether in STB, TV, DVD, or AUX mode.

Controlling Channels for Different Devices (Program Code 966)

1. Complete steps 1 through 4 of the **Controlling Channels for One Device** procedure.

2. Press and release the **Enter** key. The STB mode key blinks three times to indicate a successful entry.

After you press the **Enter** key, the channel key now controls the device associated with the mode key you select. For example, in TV mode, the channel key controls the TV, but in STB mode, the channel key controls the set-top.

Notes:

- If any other key is pressed except the Mode keys and the **ENTER** key, the remote does not accept any changes or updates. The STB mode key displays a long red flash and the remote returns to normal operation.
- If the remote times out before you complete programming channel selection control, the remote does not accept any changes. You must start over from step 1 of this procedure.

Change Power Control

The **POWER** key on the remote is set by default to control the power switch on one device at a time, in either mode (STB, TV, DVD, or AUX). When in STB mode, the remote switches the set-top from OFF (standby mode) to ON, or from ON to OFF (standby mode). However, you can alternatively program the **POWER** key to control the power switch on up to four devices at the same time, instead of controlling one device at a time. It is highly recommended that you set up the **POWER** key to turn on and off your set-top and your TV at the same time. Turning off the set-top saves electricity and extends the life of the box. When turned off, the set-top can *still* record scheduled programs on its DVR and perform any other necessary functions.

Controlling Power for Multiple Devices at Once (Program Code 977)

1. Press and hold the **STB** mode key on the remote.

2. Without releasing the **STB** key, press and hold the **OK** key.

3. Release *both* keys and all mode keys blink twice.

4. Enter the programming code **9 7 7** by pressing the numeric keys on the remote. The STB mode key blinks twice to indicate a successful entry.

5. For the first device, press the **STB** key. The STB mode key blinks twice.

6. For the second device, press the applicable mode key (TV, DVD, or AUX). The selected mode key blinks twice.

7. Repeat step 6 for up to two more devices (total of four devices).

8. Press the **ENTER** key to complete the power switch control programming. The last selected mode key blinks 3 times to indicate a successful entry.

Example: In an example scenario where you press only TV in steps 6 and 7, the **POWER** key controls *both* the set-top and the TV at the same time, regardless of which mode the remote is in (STB, TV, DVD, or AUX).

Controlling Power for One Device at a Time (Program Code 977)

1. Complete steps 1 through 4 of the **Controlling Power for Multiple Devices at Once** procedure.


2. Press the **ENTER** key to complete the power switch control programming. The last selected mode key blinks 3 times to indicate a successful entry.

After you select a mode, the **POWER** key controls the device assigned to that mode. For example, in TV mode, the remote controls power for the TV only.

Notes:

- If any other key is pressed except the Mode keys and the **ENTER** key, the remote does not accept any changes or updates. The STB mode key displays a long red flash and the remote returns to normal operation.
- If the remote times out before you complete programming power switch control, the remote does not accept any changes. You must start over from step 1 of this procedure.

Quick Reference

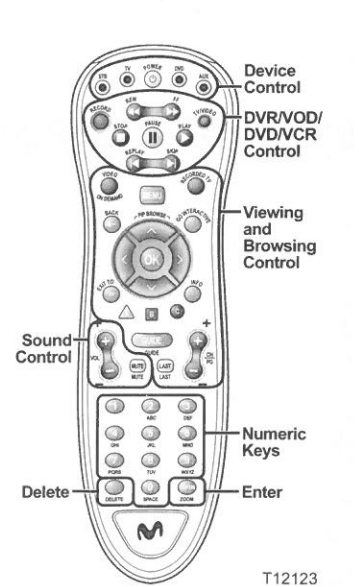

Device Control

- POWER** Turns devices on or off
- STB** Enables set-top mode functions
- TV** Enables TV mode functions
- DVD** Enables DVD mode functions
- AUX** Enables AUX mode functions

DVR, VOD, DVD, VCR Control

Notes:

- In STB mode, these keys control DVR and VOD functions.
- In DVD and AUX modes, these keys may control your DVD or VCR depending on how you have programmed the remote.

- RECORD** Records the selected program
- STOP** Stops DVD, VCR, VOD, or DVR content
- PAUSE** Pauses DVD, VCR, VOD, or DVR content
- PLAY** Plays DVD, VCR, VOD, or DVR content
- VIDEO** Scrolls through available TV or video input sources

REW **FF** Rewinds or fast forwards through DVR or VOD content

REPLAY **SKIP** Skips backward or forward through DVR or VOD content

Viewing and Browsing Control

- VIDEO** **ON DEMAND** Accesses the On Demand menu
- BACK** Returns to previous screen
- MENU** Accesses the Main Menu
- RECORDED** Accesses the DVR list of recordings
- INTERACTIVE** Enables Interactive mode
- Moves** Moves through selections
- Selects** Selects and deselects screen items
- EXIT** Returns from menu screens and to viewing TV or video
- Selects options** Selects options in menus and the program guide
- INFO** Displays text information about the selected program
- GUIDE** Displays or closes the IPG
- LAST** Returns to last channel viewed

Selects the next channel Selects the next channel, up or down, when watching TV. Moves up or down one page in the IPG and in some menu screens

Sound Control

Note: These keys are assigned to the TV when the TV mode key is programmed with a valid code.

- VOLUME** Adjusts volume
- MUTE** Mutes sound

Numeric Keys

 
Enters channel numbers, text, and remote codes. Also use to enter your parental control PIN

DELETE Clears text and numbers in text fields

ZOOM Enters and saves (stores) an entry. Sizes the picture for some high-definition television (HDTV) models

What Devices Can I Control?

The four **mode keys** arched across the top of the remote tell the remote which device you want to operate.



Each mode key is associated with different types of devices. You can use each mode key to control *one* of its associated devices:

Mode Key	Associated Devices
STB	IP gateway set-top
TV*	TVs (including HDTVs)
DVD*	DVD players
AUX*	VCRs, receivers, tuners, and Home Theater in a Box (HTIB)

* These keys can be reassigned to control different devices. Go to the **Reassign Mode Keys** section of this guide for instructions.

Put It Back the Way I Got It

You can return all advanced functions back to their original settings by resetting the remote to factory default settings. Resetting the remote to factory default settings removes all of the programming you have entered for the remote. You must reprogram the remote to restore your original settings.

Resetting the Remote to Factory Default Settings (Program Code 900)

- Press and hold the **STB** mode key on the remote.
- Without releasing the **STB** key, press and hold the **OK** key.
- Release *both* keys and all mode keys blink twice.
- Enter the programming code **9 0 0** by pressing the numeric keys on the remote. The STB mode key blinks four times to indicate you have successfully reset the remote to factory default settings.

Notes:

- If any other key is pressed except the numeric keys, the remote does not accept any changes or updates. The STB mode key displays a long red flash and the remote returns to normal operation.
- If the remote times out before you complete the factory default reset procedure, the remote does not accept any changes. You must start over from step 1 of this procedure.

Troubleshooting

If there is no response when you press the keys on the remote, please check the following items before calling for service.

Check the Batteries

- Are the batteries inserted correctly?
- Check the battery condition for leakage.
- Replace with new alkaline batteries.

Check the Device

- Is the device's power cord connected to the power outlet?
- Is the device switched on?

Check the IR Database Codes List

Is the device brand name for the device listed in the code list?

- If **yes** and there is more than one code listed, try using a different code to provide more functionality.
- If **no**, try the following:
 - Use the Auto-Search function to find a usable code.
 - If the Auto-Search function is unable to find a usable code, you may need to use the original remote provided with the device.

Code Tables

If the remote does not recognize your device, you can find codes for your device by brand name. Code tables in this section are organized by the devices assigned to each mode (TV, DVD, and AUX).

TV	
Abex	1098
ABS	1408
Acer	1041
Admiral	1009, 1023, 1022
Advent	1521, 1478, 1376, 1285, 1594, 1643
Adventure	1100
Aiko	1015
Aiwa	1098, 1034
Akai	1314, 1427, 1156, 1061, 1524, 1432, 1114, 1612, 1019, 1033
Alaron	1022
Albatron	1257, 1477
Allenware	1408
America Action	1036
Ampco	1475
Anam	1057, 1018, 1163, 1568, 1569, 1361, 1600, 1635, 1006
AOC	1057, 1052, 1056, 1053
Aomi	1570
Apex	1060
Apex Digital	1058, 1112, 1520, 1111, 1088, 1551, 1163, 1634
Apple	1058
Aster	1434, 1575
Audiovox	1036, 1015, 1106, 1528, 1541, 1455, 1135, 1070, 1084, 1069, 1071, 1076, 1083, 1077, 1079, 1075, 1081
Aventura	1024
Bang & Olufsen	1453
Belcor	1018
Bell & Howell	1043, 1001
BenQ	1545, 1557, 1136, 1041
BGH	1326
Bradford	1036
Brilliant	1487
Brookwood	1018
Broksom	1028, 1023, 1121, 1382, 1114
Bush	1643
Byd'sign	1556
Candle	1160, 1100, 1363, 1007
Carnavale	1061
Carver	1047
CCE	1490
Celebrity	1037
Celera	1111
Changshong	1073, 1061, 1015, 1011, 1363, 1007, 1101, 1114, 1100
Clitron	1100
Clarion	1036

TV, continued

Coby	1460, 1572, 1617, 1619, 1620, 1621, 1622, 1623, 1624, 1625, 1626, 1627, 1628, 1089, 1105, 1107, 1103, 1108, 1109, 1097, 1104, 1087, 1093
Commercial Solutions	1000, 1094, 1164
Concerto	1363
Contec	1036
Craig	1036
Crosley	1037, 1047
Crown	1036, 1011
Curtis	1629, 1642, 1320, 1110, 1116, 1115
Curtis Mathes	1094, 1047, 1043, 1135, 1009, 1073, 1156, 1061, 1051, 1118, 1385, 1558, 1548, 1068, 1363, 1011, 1001
CXC	1036
CyberPower	1408
Cytron	1232, 1456
Daewoo	1043, 1135, 1015, 1118, 1018, 1011, 1106, 1524
Daytron	1018
Del	1142, 1141, 1146, 1409
Demon	1051
Diamond Vision	1499, 1461
Digital Lifestyles	1592
DirectTV	1374, 1797
Dinsey	1117
Dumont	1020, 1018
Durabrand	1023, 1036, 1333, 1024, 1481
Dwin	1474, 1068
Dynex	1593, 1569, 1507, 1609
Electroland	1037
Electrograph	1038, 1570
Electrohome	1023
Element	1407, 1608, 1119
Emerson	1465, 1020, 1043, 1135, 1028, 1023, 1036, 1333, 1333, 1118, 1595, 1027, 1382, 1145, 1121, 1160, 1106, 1152, 1101, 1102, 1018, 1011, 1022, 1124, 1749, 1120
Emprex	1438, 1582
Envision	1061, 1529, 1183, 1568, 1361, 1600, 1125
Epson	1533, 1422, 1451
ESA	1314, 1024, 1027, 1595
Fisher	1043
Fujitsu	1518, 1022, 1007, 1029, 1538, 1127
Funai	1037, 1036, 1024, 1022, 1554, 1090, 1595, 1129
Fututech	1036
Gateway	1038, 1042, 1408
GE	1000, 1094, 1049, 1135, 1333, 1021, 1063, 1512, 1068, 1558, 1380, 1153, 1385, 1386
GM	1024, 1595
Gibraltar	1020, 1061, 1018
Go Video	1480
GoldStar	1022, 1132, 1130
GPX	1029
Grundig	1029
Grumpy	1036, 1022
Haier	1481, 1491, 1255, 1580, 1581, 1618, 1616, 1584, 1157, 1162, 1148, 1152, 1134, 1171
Hallmark	1333
Hanns.G	1587
Hannspree	1559, 1577, 1587, 1175, 1176
Harley Davidson	1022, 1090
Harman/Kardon	1047
Heosine	1036
Hausgeräte	1503
Hawesmy	1009
Helios	1446
Hello Kitty	1135
Hewlett Packard	1445, 1517, 1408, 1452
Hikona	1643
Hisense	1112, 1602, 1630, 1637
Hitachi	1030, 1522, 1051, 1001, 1098, 1102, 1363, 1086, 1490, 1344, 1206, 1328, 1090, 1268, 1195, 1192
Howard Computers	1408
HP	1445, 1517, 1408, 1452, 1177, 1182, 1189
Humax	1374
Hush	1408
Hyundai	1479
BUYPOWER	1408
I-inc	1578
Infinity	1040, 1436, 1435, 1457
Infocus	1450, 1611
Initial	1436, 1457
Insignia	1255, 1519, 1024, 1232, 1437, 1507, 1593, 1505, 1598, 1601, 1436
Inteq	1030
Janeli	1100
JBL	1047
JCB	1037
Jensen	1521, 1037, 1285, 1594
JVC	1023, 1092, 1054, 1055, 1169, 1526, 1026, 1080, 1615
KDS	1565, 1407
KEC	1036
Kenwood	1061, 1018
KLH	1111, 1088
Kless	1036, 1061, 1011, 1490, 1101
LG	1255, 1020, 1333, 1257, 1539, 1146, 1584, 1638, 1303, 1723, 1294, 1293, 1718, 1071, 1720, 1721, 1332, 1722, 1327, 1307
Linksys	1036
Lloyd's	1029
Logik	1001
Luxman	1363
LXI	1094, 1047, 1043, 1058, 1333, 1068
MAG	1565, 1407
Magnasonic	1145
Magnavox	1633, 1576, 1047, 1048, 1061, 1632, 1457, 1595, 1027, 1300, 1145, 1090, 1183, 1553, 1329, 1239, 1141, 1528, 1027, 1022, 1059, 1238, 1650, 1235, 1237, 1769, 1217, 1286, 1751, 1747, 1740, 1230
Magnin	1380
Majestic	1001
Marantz	1633, 1047, 1061, 1525, 1214, 1113, 1239, 1549, 1377, 1641
Matsushita	1096, 1169
Maxent	1038, 1788
Media Center PC	1458
Memorex	1257
Megatron	1333, 1051
Memorex	1043, 1023, 1032, 1333, 1001, 1022, 1593, 1121, 1305, 1165, 1725
MGA	1032, 1333, 1061, 1018, 1380
Microsoft	1000
Midland	1094, 1049, 1098, 1011, 1068, 1020
Mind	1408
Mintek	1436, 1457
Minutz	1021
Mitsubishi	1005, 1009, 1032, 1333, 1018, 1535, 1540, 1153, 1279, 1284, 1282, 1281
Monivision	1257, 1477
Motorola	1079
MTC	1073, 1061, 1018, 1363
Multitech	1036, 1490
NAD	1058, 1333, 1363, 1550
NEC	1061, 1518, 1363, 1523, 1525, 1543, 1377, 1588, 1423
NetTV	1009
Nexus Electronics	1608
Nikko	1333, 1061, 1015
Nova Media	1408
Norcent	1112, 1531, 1183, 1568, 1569
Northgate	1408
Norwood Micro	1040

TV, continued

NTC	1015
NuVision	1573, 1608
Olivia	1406, 1468, 1004, 1463, 1421, 1799, 1798
Orwia	1036
Oppo	1497
Optimus	1096, 1043, 1169, 1145, 1305, 1165
Optima	1559, 1607
Optonica	1009, 1064
Orion	1028, 1023, 1593, 1022, 1121, 1382, 1122
Otic	1643
Panasonic	1468, 1096, 1469, 1049, 1169, 1554, 1010, 1564, 1385, 1305, 1166, 1123, 1051, 1654, 1659, 1655, 1657, 1664, 1670, 1663, 1730, 1713, 1666
PARK	1603
Penney	1094, 1058, 1049, 1073, 1333, 1061, 1018, 1021, 1063, 1098, 1011, 1012, 1068, 1558, 1380, 1385
Peltars	1565
Phico	1047, 1061, 1024, 1018, 1059, 1554, 1150, 1595
Philips	1633, 1576, 1047, 1126, 1239, 1549, 1337, 1632, 1234, 1785, 1226, 1221, 1212, 1774, 1213, 1202, 1216, 1791, 1273, 1205, 1201, 1779, 1794, 1819, 1793
Philips Magnavox	1772
Pilot	1061, 1018, 1011
Pioneer	1469, 1102, 1149, 1377, 1336, 1339, 1342, 1343, 1346, 1338, 1345, 1335, 1334
Polaroid	1565, 1111, 1639, 1391, 1604, 1596, 1502, 1371, 1563, 1393, 1407, 1460, 1232, 1040, 1392, 1446, 1756, 1754
Portland	1135, 1015, 1118, 1018, 1011
Prima	1521, 1476, 1376, 1285, 1594
Princeton	1047
Prism	1259
Proscan	1756, 1094, 1061, 1068, 1558, 1366, 1605, 1614, 1648, 1610, 1272
Proton	1333
Protron	1494, 1430
Proview	1565, 1407
Pulsar	1020, 1018
Pyle	1756, 1754
Quasar	1096, 1049, 1064, 1169, 1385, 1305
Radio Shack	1094, 1043, 1036, 1333, 1061, 1018, 1098, 1011, 1363, 1064, 1068, 1090
RCA	1144, 1000, 1094, 1049, 1009, 1640, 1613, 1610, 1596, 1459, 1386, 1385, 1153, 1380, 1586, 1558, 1552, 1548, 1546, 1068, 1149, 1118, 1067, 1065, 1082, 1102, 1018, 1220, 1426, 1804, 1801, 1758
Realistic	1043, 1036, 1333, 1061, 1018, 1098, 1011, 1363, 1064
RevolutionHD	1570
Ricoh	1408
Runco	1020, 1061, 1523, 1377, 1571
Sampo	1038, 1061, 1098, 1011
Samsung	1314, 1073, 1156, 1333, 1061, 1161, 1173, 1547, 1530, 1172, 1169, 1490, 1363, 1011, 1098, 1018, 1360, 1375, 1418, 1355, 1321, 1366, 1367, 1349, 1316, 1356, 1405, 1313, 1399, 1358, 1369
Samsux	1011
Sansui	1023, 1024, 1064, 1593, 1090, 1121, 1382, 1114, 1256, 1263, 1251, 1269, 1252, 1260
Sanyo	1047, 1043, 1095, 1527, 1062, 1380
Sceptre	1005
Scintilla	1503
Scotch	1333
Scott	1028, 1036, 1333, 1018, 1022, 1428
Sears	1094, 1047, 1043, 1058, 1333, 1024, 1363, 1012, 1022, 1068, 1487, 1090
Sharp	1023, 1091, 1011, 1025, 1064, 1350, 1537, 1153, 1378, 1248, 1247, 1678, 1673, 1677, 1674, 1691, 1696, 1688, 1671, 1672, 1684, 1693, 1685, 1682, 1700, 1676, 1689, 1686, 1692, 1697, 1690
Sheng Chia	1009
Sherwood	1563
Shogun	1018
Signature	1001
Simpson	1007
Skyworth	1014
Sole	1570
Sony	1037, 1219, 1534, 1574, 1090, 1388, 1408, 1515, 1814, 1812
Soundesign	1036, 1333, 1022, 1007
Sova	1494
Soyo	1566, 1578, 1591
Spectronik	1565, 1407
Squareview	1020
SSS	1036, 1018
Stack 9	1408
Starlite	1036
Studio Experience	1477
SunBrite	1368
Superscan	1009, 1181, 1027
Supre-Macy	1100
Supreme	1037
SVA	1112, 1491, 1446, 1595
Sylvania	1465, 1047, 1061, 1024, 1059, 1554, 1150, 1464, 1145, 1300, 1027, 1595, 1741, 1746, 1420, 1748, 1708, 1706, 1710, 1711, 1745
Symphonic	1036, 1024, 1090, 1145, 1027
Syntax	1406, 1488, 1004, 1463, 1421
Systemax	1408
Tagar Systems	1408
Tandy	1009
Tatung	1040, 1042
TCL	1326
Teac	1326
Technics	1096, 1049
Technia	1643
Technd Ace	1022
Techview	1478
Techwood	1049, 1363
Teknika	1047, 1036, 1032, 1073, 1015, 1001, 1018, 1011, 1363, 1022, 1097
Telefunken	1001
Thomas	1090
TMK	1333, 1363
TNCI	1020
Toshiba	1159, 1043, 1058, 1223, 1255, 1073, 1222, 1532, 1340, 1550, 1169, 1017, 1341, 1569, 1178, 1377, 1267, 1114, 1006, 1154, 1597, 1408, 1473, 1470, 1509, 1647, 1820, 1646, 1835, 1821, 1429, 1447, 1444, 1458, 1462, 1496, 1486, 1471, 1510, 1449, 1513
Totevision	1011
Touch	1408
TruTech	1428, 1599
TVS	1023
Ultra	1430
Universal	1063
US Logic	1040
Vector Research	1036, 2474, 2178
Venturer	1592, 1704
VEOS	1487
Victor	1092
Vidikron	1047, 1377, 1571
Vidtek	1033, 1018
Viewsonic	1037, 1206, 1180, 1181, 1184, 1187, 1185, 1190, 1441, 1188, 1361, 1600, 1408, 1763, 1787, 1826, 1765, 1762
Viking	1100
Viore	1435, 1590, 1603, 1629, 1789, 1780, 1197
Vizio	1036, 1433, 1181, 1184, 1042, 1624,